


RD7200 Hardware Layout

1. Keypad
2. LCD with auto backlight
3. Haptic (vibration) feedback
4. Speaker
5. Battery compartment
6. Accessory connector
7. Headphone connector
8. Bluetooth module antenna
9. SWING Warning system
10. Optional Lithium-Ion battery pack
11. USB connector (inside the battery compartment)
12. Power key : Switches the unit on and off. Opens the locator menu
13. Frequency key : Selects frequency. Closes sub-menu.
14. Up and down arrows : Adjusts the locator signal gain. Scrolls through the menu options.
15. Antenna key : toggles Peak, Peak+, Null and Guidance modes. Opens a sub-menu.
16. Indicates the signal strength and Peak marker
17. Signal strength: Numerical indication of signal strength.
18. Null / Proportional Guidance arrows: Indicates the location of the line relative to the locator.
19. Battery icon: Indicates the battery level
20. Gain readout
21. Volume icon: Displays the volume level
22. Radio Mode: Indicates when Radio Mode is active.
23. Power Mode: Indicates when Power Mode is active.
24. Accessory indicator: Indicates when an accessory is connected.
25. A-Frame icon: Indicates when the A-Frame is connected.
26. Frequency / current / menu readout.
27. Antenna mode icon: Indicates antenna selection: Peak, Null, Peak+ and Guidance Mode (model dependent).
28. Sonde icon: Indicates that the signal source is from a sonde.
29. Line icon: Indicates that the signal source is from a line.
30. Compass indicator: Shows the direction of the located cable relative to the locator.
31. Transmitter standby indicator.
32. Depth readout.

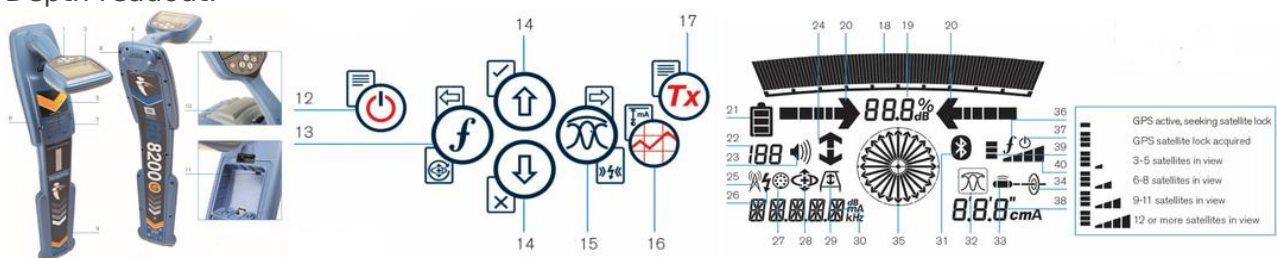

Revision #1

Created 12 August 2025 00:04:33 by Nathan Maysonet

Updated 12 August 2025 00:04:33 by Nathan Maysonet